

## Optional Wall Thermostat AC05558

1. ON THE VALVE, REMOVE THE BLUE JUMPER BETWEEN TH & TPTH SCREWS ON THE GAS VALVE;
2. CONNECT THE THERMOSTAT WIRES ON THE SAME CONNECTORS.

The optional wall thermostat will automatically keep your room at an even temperature. You need to choose a convenient location for the thermostat. Remember that it should be at least 10 feet from the stove and away from direct radiation of the fire. Run the correct gauge wire (see table) from the valve to the thermostat and wire as shown in the diagram.

DISTANCE	DIAMETRE
20 ft	18 GA
30 ft	16 GA
40 ft	14 GA
50 ft	12 GA

